




## Easy Twin Carrycot

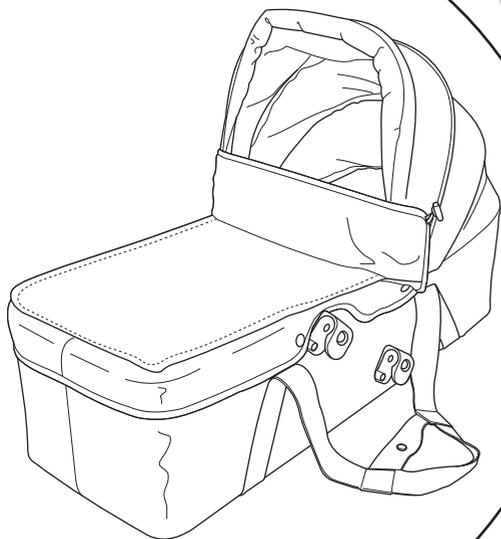

This product is tested to: BS EN 1888:2012 & BS EN 1466:2004

**INSTRUCTIONS:** Please read carefully and keep for future reference. Your child's safety may be affected if you do not follow these instructions.

The carrycot is suitable from birth until the child can sit up unaided. This is suitable for a child who cannot sit up by itself, roll over and cannot push itself up on it's hands and knees. Maximum weight of the child: 9kg.

## Safety warnings

### Important: Read, understand and follow these instructions carefully and retain for future reference

1. **WARNING:** Never leave your child unattended.
2. **WARNING:** Ensure that all the locking devices are engaged before use.
3. **WARNING:** To avoid injury ensure that your child is kept away when unfolding and folding this product.
4. **WARNING:** Do not let your child play with this product.
5. **WARNING:** Do not let other children play unattended near the carrycot.
6. **WARNING:** Check that the pram body, pushchair body or seat unit attachment devices are correctly engaged before use.
7. **WARNING:** The carrycot is suitable from birth until the child can sit up unaided. This is suitable for a child who cannot sit up by itself, roll over and cannot push itself up on it's hands and knees. Maximum weight of the child: 9kg.
8. **WARNING:** Do not use a mattress other than the one supplied with the carrycot. Only use replacements approved by the manufacturer. The total thickness must not be more than the 30mm.
9. **WARNING:** This product is designed to carry only one child at a time.
10. **WARNING:** Never use your carrycot on a stand.
11. **WARNING:** Use only on a firm, horizontal level and dry surface.
12. **WARNING:** Be aware of the risk of open fire and other sources of strong heat, such as electric bar fires, gas fires, etc in the near vicinity of the carrycot.

## Safety warnings (when attached to the compatible Travel System)

13. **WARNING:** This pushchair is not suitable for running or skating.
14. **WARNING: NEVER** run or rush across a road with your pushchair. **NEVER** use your pushchair in a way for which it is not designed.
15. **WARNING:** Always apply the brakes when the pushchair is stationary, and when placing and removing children. When the parking brake is used, always test it is properly applied by pushing on the handle of the pushchair.
16. **WARNING:** Hold onto your pushchair when close to moving vehicles and trains as the draught from the vehicles may move the pushchair even with the brakes on.
17. **WARNING:** Never assume a driver can see you or your child.
18. **WARNING:** Parcels, accessories and other items (e.g. hand bags, shopping bags, etc) that are placed on the handles, back of the backrest or sides of the pushchair will affect the stability of the pushchair and can cause failure of one or more components of the pushchair.
19. **WARNING:** Do not lift and carry the pushchair with a child in it.
20. **WARNING:** Do not use pushchair on steep slopes, stairs, escalators, beaches, mud, etc.
21. **WARNING:** Ensure that children are clear of moving parts before making adjustments.
22. **WARNING:** Taking children up or down stairs, escalators, steps, steep slopes and muddy/rough terrain could be dangerous and should not be attempted. Remove your child from the pushchair for easy carrying to negotiate such hazards, or simply avoid them.
23. **WARNING:** Do not use replacement parts or accessories other than those approved by the manufacturer as others may render the product unsafe.
24. **WARNING:** Do not load the basket with a weight in excess of 2kg.
25. **WARNING:** If your pushchair is to be used by someone who is unfamiliar with it, e.g. grandparents, then show them how it works before letting them use it.
26. **WARNING:** Never leave raincovers, hoods and aprons on indoors or in hot weather as your child might overheat.
27. **WARNING:** Do not allow your child to climb unassisted into or out of the pushchair.

## Care and maintenance

Clean minor spills and stains on cloth, vinyl or plastic surfaces with cold water and mild soap. Air dry.

Any plastic and metal parts may be sponged clean with warm water and mild detergent.

Always allow to dry thoroughly before using or storing.

Do not leave the carrycot in direct sunlight for prolonged periods as fabrics may fade.

Never use abrasives, ammonia, bleach or spirit based cleaners.

Always store your carrycot in a dry place.

Regularly inspect the carrycot for damage or wear, paying particular attention to the handle fixings and locks, chassis attachment points and harness (if fitted).

Discontinue use if any part is broken, torn or missing.

**WARNING:** Mattress must be fully dry before storage or usage.

**WARNING:** Mattress may not soak up vomit.

### Ride-on platform attachments

This product has not been tested with a ride-on platform. Consult your retailer for suitability if you are considering getting a ride-on platform. Any damage resulting from the use of a ride-on platform will not be covered by the warranty.

### Care of the rain cover

A. The rain cover can be cleaned by sponging with warm water and mild detergent.

B. Ensure raincover is completely dry before storing.

C. If your child tends to kick the cover, simply release the foot Velcro® to avoid damage to the rain cover.

**Warning:** This cover is for outdoor use only. The rain cover must be removed if the child remains in the pushchair indoors, otherwise the child may overheat, also remove the rain cover in warm sunny weather.

**Note:** Do not put in your car on hot days, as this will damage your rain cover.

## Your 3 year warranty

Whilst we make and test our products to the highest standards of durability there's always a small chance of a hiccup! Our promise is to repair, replace or refund a MyChild product that has an identified manufacturing defect from the date of purchase for a full 3 years thereafter at no extra cost.

However, you must register within 28 days of the date of purchase to receive the full 3 years guarantee!

To receive your full guarantee you can register your product by: visiting [www.mychild.co.uk/warranty.html](http://www.mychild.co.uk/warranty.html) and complete the warranty form, or by telephone on 0161 335 2508.


# Welcome

Thank you for purchasing the MyChild Easy Twin Carrycot.

Please read the instructions and warnings carefully before use to ensure safe and satisfactory operation of this product.

Your child's safety is your responsibility. If you have a query with this product or require replacement parts, please contact the MyChild Helpline on 0161 335 2508.

## Parts list

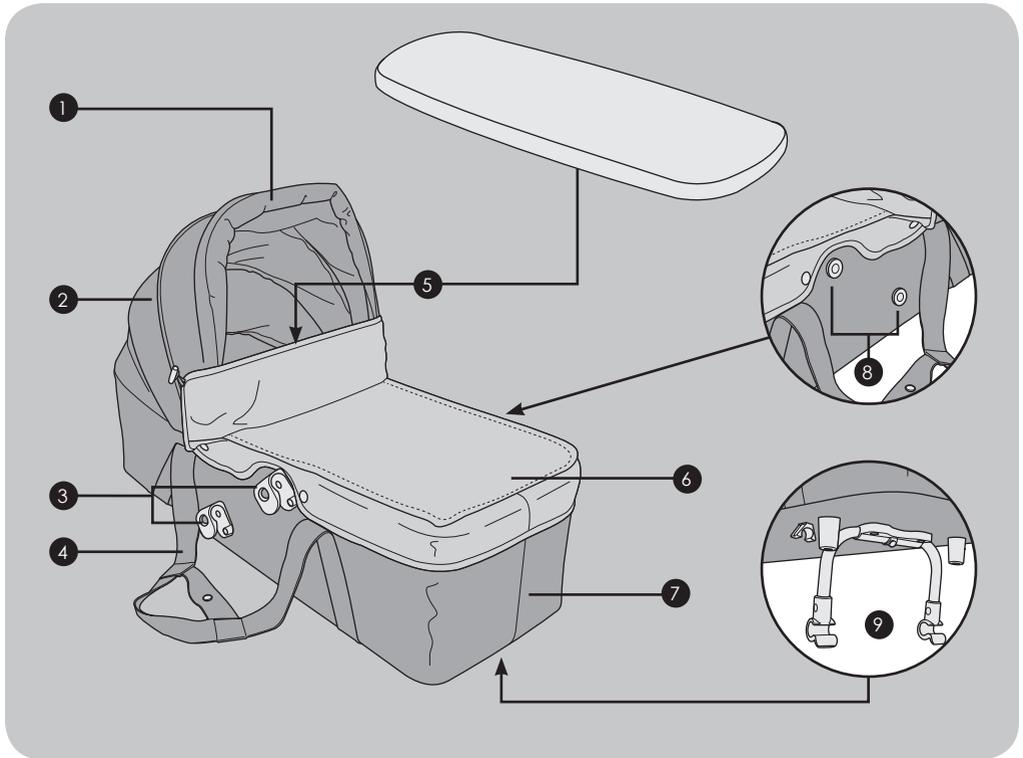

- |   |                           |   |                      |
|---|---------------------------|---|----------------------|
| 1 | Handle                    | 6 | Apron                |
| 2 | Hood                      | 7 | Carrycot body        |
| 3 | Pushchair connector clips | 8 | Pushchair connectors |
| 4 | Carry strap               | 9 | Support bar*         |
| 5 | Mattress                  |   |                      |


\*Provides extra support when using the carrycot on the Easy Twin stroller with no seat covers.

## Identifying your carrycot(s)

left-hand-carrycot  
or "main" carrycot



right-hand-carrycot

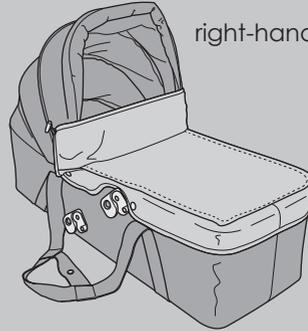

**NOTE!** The left and right-hand sides are based on being stood in front of the stroller.


## Possible combinations



1



2

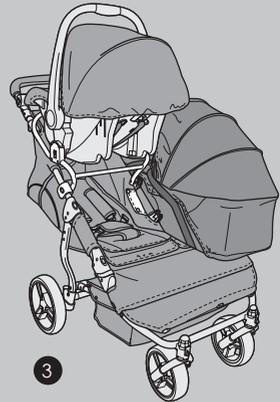

3

There are two very distinct carrycots and depending on your situation you may require one or both of them.

If you wish to only use one carrycot and no other optional extra, then please use the left-hand or "main" carrycot.


1. Carrycot on left (requires the left-hand or "main" carrycot)
2. Carrycot on both sides (requires the left-hand or "main" carrycot and right-hand carrycot)
3. Car seat\* on left + Carrycot on right (requires upper-left-hand adapter\*\* and right-hand carrycot)

**NOTE!** The left and right-hand sides are based on being stood in front of the stroller.


\* Easy Twin Car Seat sold separately

\*\* Upper-left-hand car seat adapter sold separately


## Attaching the carrycot

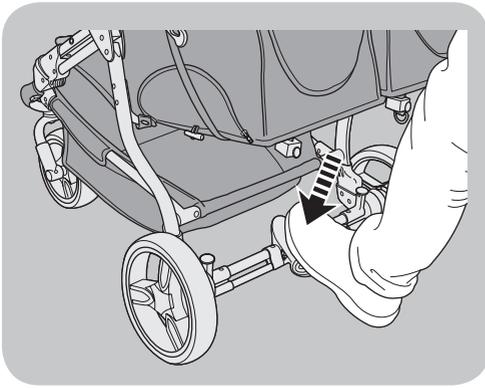


1. **Apply the brake:** Ensure the stroller brake is on and that the stroller cannot move.

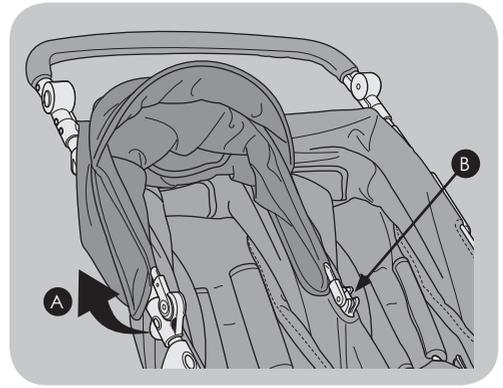

2. **Remove the hood:** Unfasten the press studs on the back of the left-hand hood. Unclip the hood-clip (A) and pull the round connector from the mounting point (B).

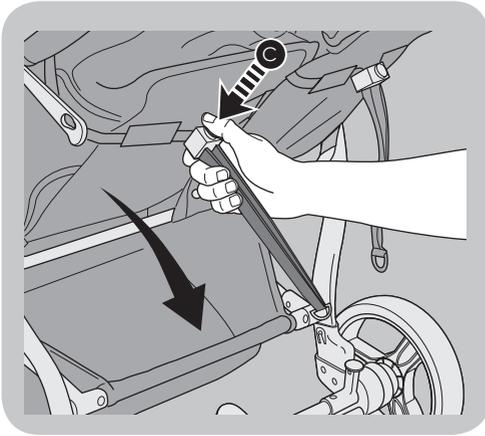


3. **Recline the seat(s):** Whilst supporting the backrest, press the button on the recline mechanism (C) and pull the recline mechanism downwards and lower the backrest into the most reclined position.

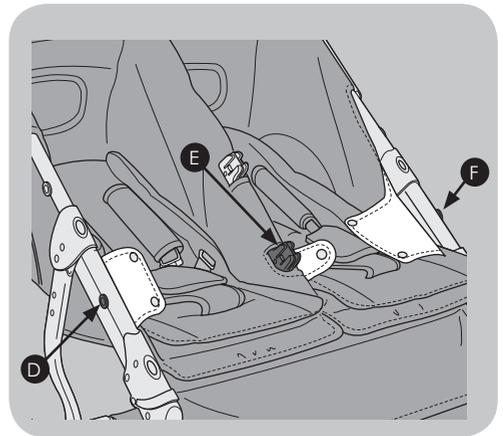

4. **Prepare the mounting points:** Unfasten the press studs on the fabric covering the lower-left mounting point (D) and lower-centre mounting point (E)..

If you intend to attach two carrycots; then you will also need to unbutton the fabric covering the lower-right mounting point (F).

## Attaching the carrycot (continued)

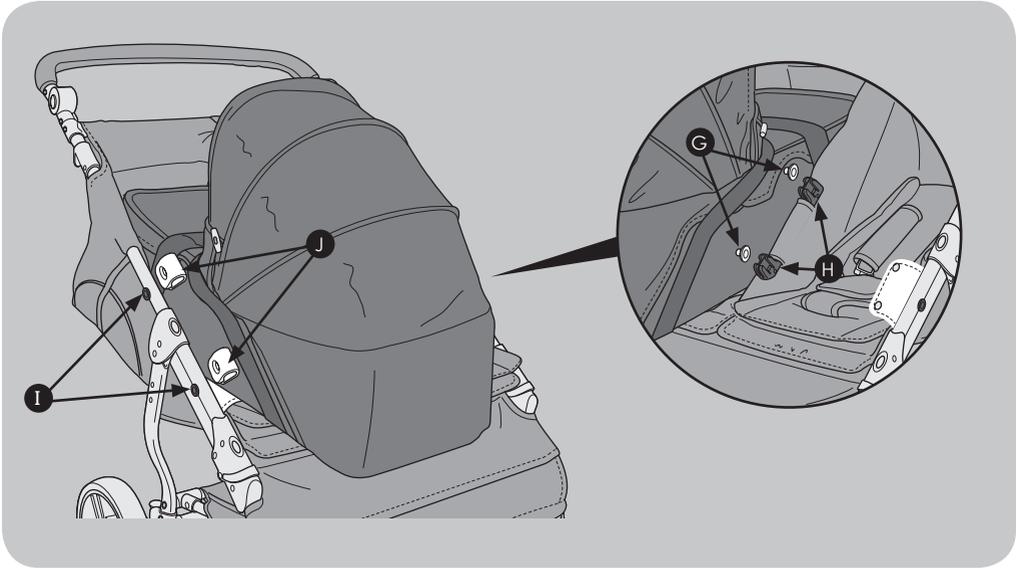

5. **Attach the carrycot:** Line up the carrycot with the stroller so that it is parent facing ensuring the carry straps are kept together on top of the carrycot.


Push both of the round connectors (G) into the mounting points (H) in the middle of the stroller.

Connect both clips (I) over the mounting points (J) on the outside of the stroller.


Pull the carrycot to check both sides are secured properly.

## Attaching the carrycot (with stroller seat fabrics removed)

If you do not intend to use one or both of the stroller seats for an extended period of time (i.e. you intend to attach a carrycot) then it is possible to remove the stroller seat fabrics for storage.

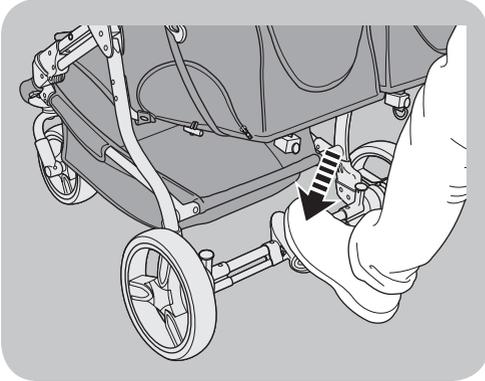


1. **Apply the brake:** Ensure the stroller brake is on and that the stroller cannot move.

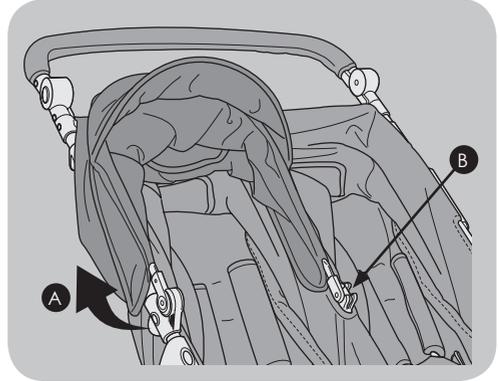

2. **Remove the hood:** Unfasten the press studs on the back of the left-hand hood. Unclip the hood-clip (A) and pull the round connector from the mounting point (B).




3. **Remove the seat fabric:** Release the two press studs at the back of the seat (C) and undo the zip (D).

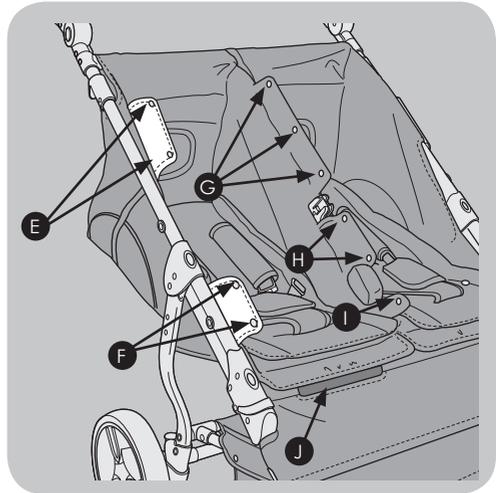

4. **Remove the fabric:** Release all the press studs (E, F, G, H, I). Unfasten the Velcro® tab (J) and remove the seat fabric. Repeat steps 1,2,3 on the remaining seat if you wish to remove both seat fabrics.

## Attaching the carrycot (with stroller seat fabrics removed) (cont)

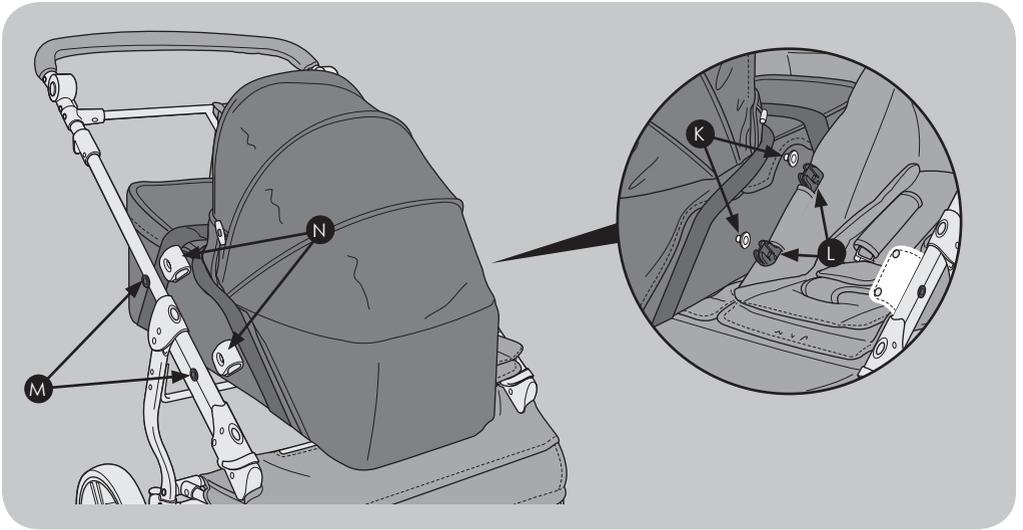

**5. Attach the carrycot:** Line up the carrycot with the stroller so that it is parent facing ensuring the carry straps are kept together on top of the carrycot.

Push both of the round connectors (K) into the mounting points (L) in the middle of the stroller.

Connect both clips (M) over the mounting points (N) on the outside of the stroller.


Pull the carrycot to check both sides are secured properly.

### **6. Secure the support bar:**

Lower the support bar (O) towards the chassis's rear crossbar and clip the support bar to the crossbar.

Pull the support bar to check it is secured properly.

**IMPORTANT: ALWAYS** attach the support bar when using the stroller without a seat fabric.

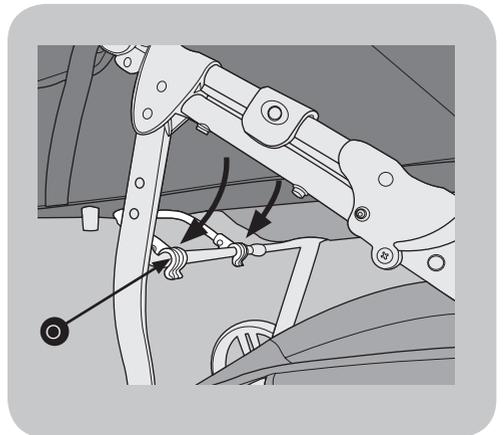







Customerservice@kooltrade.co.uk  
Imported by MyChild. M34 3QA  
[www.mychild.co.uk](http://www.mychild.co.uk)  
Tel: 0161 335 2508